

BMW Vehicle Coverage

V2.1 BMW software supported read dtc,erase dtc.

supported vehicle:1 Series,3 Series,5 Series,6 Series,7 Series,8 Series,X Series,Z

Series,

supported system:

DME [Engine]

EGS [Transmission]

ABS [Antilock brake]

SRS [Air bag]

IHKA/IHKR [AC/heater]

IKE/IKI/KOMBI [Instrument cluster]

EML [Elec. throttle]

SPM/SM

EWS [Elec. immobilize system]

ZKE [Central body electronic]

GR [Cruise control]

PDC [Park Distance Control]

SZM [Switching center,center console]

BIT [Basis Interface Telephone]

LSZ/LCM [Light switching center]

LEW [Steering-angle sensor]

RAD [Radio]

EHC/EDC [Signal-axle air suspension]

BM [On-board monitor]

AIC [Automatic Interval Control]

NAV [Navigation system]

MFL [Multi-function steering wheel]

VID [Video Module]

SES [Language-input system]

MID [Multi Information Display]

SHD [Sliding/tilting sunroof]

SMF [Seat memory,driver]

SPMBT [Mirror memory,passenger]

SPMFT [Mirror memory,driver]

VTG [Gearbox control]

CID [Central Information Display]

EPS [Electronic Power Steering]

SBSL [Satellite,B-pillar,left]
SBSR [Satellite,B-pillar,right]
CVM [Convertible-top module]
SIM [Safety and Information Module]
SMB [Entrance aid,passenger]
URS [Rollover sensor]
RDC [Tyre pressure control]
VMX [Top-speed Regulation]
VNC [Variable Camshaft Control]
EKM [Electronic Body Module]
DWA [Burglar-alarm system]
XEN [Xenon Lights]
FHK [Rear Heater A/C System]
GSA [Closed-Loop-Controlled Differential-Lock AWD]
AHK [Active Rear-Axle Kinematics]
ADS [Throttle-Valve Control]
CAS [Car Access System]
DME [Digital Motor Electronics]
EGS [Transmission control]
VTC [Valvetronic]
HPFI [Control module]
ACC [Active Cruise Control]
ARS [Dynamic Drive]
CIM [Chassis Integration Module]
DSC [Dynamic Stability Control]
EDC [Damper Control]
EHC [Ride level(height) control]
EMF [Parking brake]
RDC [Tyre pressure control]
AHL [Adaptive directional headlights]
AHM [Trailer module]
AMP [Amplifier]
ASK [Audio System Controller]
SZM/BZM [Switching/Control center, center console]
FBZM [Rear compartment, control center, center console]
CD [Control Display/M-ASK-BO User interface]
CD-GW [Control Display(Gateway)]/M-ASK-GW [Gateway]
SG-FD [Control module, rear-compartment]
SG-FD-GW [Control module, rear-compartment]
FD [Rear-compartment display]
CDC [CD Changer]
CON [Controller]
FCON [Rear Compartment controller]

DWA [Antitheft alarm system]
FBI [Flexible Bus Interface]
IHKA [Integrated automatic heating/ A/C control]
FKA [Rear heater/air conditioning]
HKL [Rear-lid lift]
JBIT [Japan Basis Interface Telephone]
KHI [Headset interface]
KOM [Instrument cluster]
LM [Lights Module]
DVD-C [DVD Changer]
NAV [Navigation system]
JNAV [Navigation system, Japan]
PDC [Park Distance Control]
CA [Comfort Access]
PM/MPM [(Micro) Power module]
RLS [Rain/Light Sensor]
SASL [Satellite, A-pillar, left]
SASR [Satellite, A-pillar, right]
SBSL [Satellite, B-pillar, left]
SBSR [Satellite, B-pillar, right]
SFZ [Satellite vehicle centre]
SSBF [Satellite, seat, passenger]
SSFA [Satellite, seat, driver]
SSH [Satellite, seat, rear]
STVL [Satellite, door, front left]
STVR [Satellite, door, front right]
SHD [Sliding/tilting sunroof]
SINE [Siren and tilt sensor]
SMFA [Seat module, driver]
SMBF [Seat module, passenger]
SMFAH [Seat module, driver's side rear]
SMBFH [Seat module, passenger's side rear]
SHZH [Independent/auxiliary heater]
SVS [Language processing system]
SZL [Switch center, steering column]
SEC [Supplementary control module]
TEL [Telephone]
TCU [Telematic Control unit]
TMBFT [Door module, passenger door]
TMBFH [Door module, passenger's side rear]
TMFAT [Door module, driver's door]
TMFAH [Door module, driver's side rear]
VM [Video Module]

WIM [Wiper module]
ZGM [Central Gateway Module]
SIM [Safety and Information Module]
KBM [Body Basic Module]
SBSL [Satellite, B-pillar, left]
SBSR [Satellite, B-pillar, right]
TMFA [Door module, driver]
TMBF [Door module, front passenger]
CID [Central Information Display]
AL [Active steering/AFS Active Front Steering]
JBE [Junction-box electronics]
MRS/ACSM [Multiple Restraint System/Crash Safety Module]
FRM [Footwell Module]
RLS [Rain/driving lights sensor]
FZD [Function Center, Roof]
CCC-ANT [Aerial tuner]
DDE [Diesel Electronics]
CCC-A [Applications]
EKPS [Fuel-pump control]
GWS [Gear selector switch]
VTG [Transfer case]
VTC [Valvetronic]
VTC2 [Valvetronic 2]
CCC-ASK [Audio system controller]
AL [Active steering]
EDCSHL [Damper satellite, rear left]
EDCSHR [Damper satellite, rear right]
EDCSVL [Damper satellite, front left]
EDCSVR [Damper satellite, front right]
VDM [Vertical Dynamics Management]
ACSM [Crash Safety Module]
AMPH [Hi-Fi amplifier]
AMPT [Top Hi-Fi amplifier]
CA [Comfort Access system]
CCC-BO [User interface]
CCC-GW [Gateway]
CHAMP-BO [User interface]
CHAMP-GW [Gateway]
CNAV [Navigation system, China]
DAB [Digital tuner]
FD [Rear-cabin display]
FLA [High Beam Assist]
FRM2 [Footwell module 2]

FZD [Function centre, roof]
HUD [Head-Up Display]
IBOC [Digital tuner US]
IHKA [Integrated automatic heating/air conditioning]
INSTR [Instrument cluster]
JBE2 [Junction Box electronics 2]
KHM [Headphones module]
KNAV [Navigation system, Korea]
M-ASK-BO [User interface]
M-ASK-GW [Gateway]
RFK [Reversing camera]
RLSS [Rain/light solar sensor]
RSE [Rear Seat Entertainment]
SDARS [Satellite tuner]
SINE [Siren with tilt sensor]
ULF-SBX [Interface box]
ULF-SBX-H [Interface box High]
VSW [Video switch]
EHC [Electronic Ride-Height Control]
ULF [Universal charging and hands-free facility]
IHKR [Integrated heating/air-conditioning regulation]
IHR [Integrated heater control]
M-ASK-NAV [Navigation system]
MRS [Multiple Restraint system]
RAD2-BO [User interface]
RAD2-GW [Gateway]
SDMRS [Satellite tuner]
DME2 [Digital Motor Electronics 2]
ACC2 [Active Cruise Control 2]
ANT [Aerial/antenna tuner]
ARS [Dynamic Drive 2]
BZM [Control centre, centre console]
CD [Control Display]
CEM [Clean Energy Module]
CIM2 [Chassis Integration Module 2]
LM2 AHL2 [Light module 2 with adaptive headlight 2]
LM2 [Light Module 2]
LM2 [Light Module 2 with adaptive headlight]
NVE [Night Vision Electronics]
NVK [Night Vision camera]
PM [Power Module]
SEC2 [Supplementary control unit 2]
SGM-SIM [Safety and Gateway Module (SIM)]

SGM-ZGM [Safety and Gateway Module (ZGM)]
VTC2 [Valvetronic, bank 2]
ZBM [Two-battery management]
DSC [Dynamic Stability Control PLUS]
DSC [Dynamic Stability Control Premium]
ALBBF [Active backrest width, front passenger]
ALBFA [Active backrest width, driver]
CIC [Car Information Computer]
CIC-GW [Gateway]
IHKA2 [Integrated automatic heating/air conditioning]
KGM [Body Gateway Module]
SZL2 [Steering column switch centre 2]
LDM [Longitudinal Dynamics Management]
LRR [Long-range sensor]
MPM [Micro-power module]
SMG [Sequential Manual Gearbox]
TLC [Lane Departure Warning]
Integrated Chassis Management
Rolling-moment distribution, rear axle
ABS/ACS/DSC [Dynamic Stability Control]
AMP [Hi-Fi amplifier]
IHKS [Integrated heating/air-conditioning control]
IHS [Integrated heating control]
MJOY [MINI joystick]
AIRBAG
EWS